# AMEDTEC ECGpro Tango+ Interface Notes

To setup Tango+ with the ECGpro stress system, simply follow the directions below.

# 1. Verify Correct RS-232 and ECG Trigger Cables

- RS-232 Cable used to communicate with the ECGpro. This cable enables the ECGpro to prompt Tango+ when it needs a BP measurement, and allows the Tango+ BP reading to be transferred to the ECGpro display and reports.
  - SunTech Part Number = 91-0013-00
  - o Connection Ends:

ECGpro Connection 9 pin female

Tango+ Connection 9 pin female





- ECG Trigger Cable provides the ECG signal from the ECGpro to the Tango+.
  - SunTech Part Number = 91-0066-00
  - Connection Ends:


ECGpro Connection DB 25 male

Tango+ Connection BNC male





# **Tango+ Monitor**

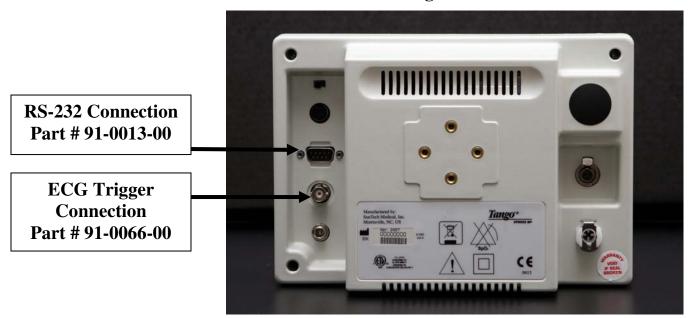

#### 2. Connect the RS-232 Cable

From: the RS-232 connection on the rear panel of the Tango+.

To: one of the COM ports on the back of the PC of the AMEDTEC ECGpro stress system

# 3. Connect the ECG Trigger Cable

From: the BNC External ECG connection on the rear panel of the Tango+.

To: the LPT1 port on the back of the PC of the AMEDTEC ECGpro stress system

# 4. Tango+ Monitor Setup

- a. When the operating screen is displayed, press the **SELECT** button 2 times. This will bring up the **MAIN MENU** screen.
- b. Using the UP or DOWN arrows, highlight **MONITOR SET UP** and press the **SELECT** button.
- c. Using the UP or DOWN arrows, highlight **STRESS SYSTEM** and press the **SELECT** button.
- d. Using the UP or DOWN arrows, scroll through the list until **ECGpro** is highlighted and press the **SELECT** button to confirm the choice.
- e. Using the UP or DOWN arrows, select **EXIT** twice to return to the operating screen.

# 5. ECGpro System Setup

- a. Turn the AMEDTEC stress system on. Start AMEDTEC ECGpro by clicking the desktop icon (if not automatically started).
- b. Select File | Options.
- c. On the left hand side go to **Devices**  $\rightarrow$  **SunTech Tango.**
- d. Mark the checkbox 'Enable Blood Pressure unit'.
- e. Select the correct interface (COM1, COM2, etc). This is the port the RS-232 cable (9 pin female) is plugged into.
- f. Click on the **Test** button to check the connection to the Tango+ device.

- g. Select an appropriate **Maximum time for BP measurement**. (This is the hold-back time to start the BP measurement before the end of an exercise stage to finish the measurement inside that stage).
- h. On the left hand side go to **Devices** → **CardioPart 12 USB.**
- i. For **QRS Trigger** select:
  - as interface LPT
  - the right port address of LPT1 (hexadecimal value, normally 0378)
  - a Duration of **50ms**
  - mark the check box TTL active LOW

### FAQs for Tango+

- Q. The Tango+ displays a status message. What does it mean and what do I do?
- **A.** See the Quick Set-Up guide (that is attached to your Tango+) or the Troubleshooting section in your User's Guide for details on the Status Message and solution.
- Q. The Tango+ monitor returns results of 0/0 after blood pressure measurements. What do I need to do to get a BP reading?
- A. There are certain noisy conditions where the Tango+ cannot accurately measure BP. When the Tango+ encounters these situations, it returns a reading of 0/0. Placement of the microphone attached to the cuff is critical for reliable operation of the Tango+. Follow the instructions in the Cuff Tutorial (located on the SunTech Medical website under Products → Tango+) for correct microphone placement. Follow steps 1 and 2 in Conducting the Stress Test in the User's Guide to provide the best conditions to obtain a measurement.
- Q. Can I use a heart rate or blood pressure simulator to test whether the Tango+ is working correctly with my stress system?
- **A.** You cannot use a heart rate or blood pressure simulator to test whether the Tango+ is working with your stress system. The Tango+ monitor requires that the ECG signal and the Korotkoff sounds, collected by the microphone in the cuff, originate from the same source, meaning the patient.
- Q. I cannot clearly see the Tango+ display. How do I fix this?
- **A.** If you cannot clearly read Tango+, you can adjust the contrast of the display by following these steps:
  - 1. When the operating screen is displayed, press the **SELECT** button 2 times. This will bring up the **MAIN MENU** screen.
  - 2. Using the UP or DOWN arrows, highlight **MONITOR SET UP** and press the **SELECT** button.
  - 3. Using the UP or DOWN arrows, highlight **CONTRAST** and press the **SELECT** button.
  - 4. Using the UP or DOWN arrows, modify the contrast of the screen. When you are finished, and press the **SELECT** button to confirm the choice.
  - 5. Using the UP or DOWN arrows, select **EXIT** twice to return to the operating screen.

# Q. My Tango+ displays a message, "Please VERIFY CALIBRATION" or "Equipment Maintenance and Calibration Required." What do I do?

#### A. Verification of Pressure Calibration

## **Equipment Required:**

- 1. Calibrated electronic manometer or equivalent.
- 2. 500mL volume or the Orbit-K Adult Plus cuff wrapped around something that will not break or crush (no glass).
- 3. Hand Inflation Bulb with bleed valve.
- 4. Tubing, Tee pieces, and miscellaneous connectors or you can order the T-Tube Kit (SunTech Part # 98-0030-00).

#### **Procedure:**

- 5. When the operating screen is displayed, press the **SELECT** button 2 times. This will bring up the **MAIN MENU** screen.
- 6. Using the UP or DOWN arrows, highlight **MONITOR SET UP** and press the **SELECT** button.
- 7. Using the UP or DOWN arrows, highlight **VERIFY CALIBRATION** and press the **SELECT** button. The monitor will close its bleed valves and will display on its screen the pressure applied to the patient hose connector.
- 8. Verify the Tango+ calibration by manually inflating and checking the manometer against the pressure reading on the Tango+ display.
- 9. Once the calibration has been completed, use the UP or DOWN arrows to select **EXIT** twice and return to the operating screen.