


Nasiff Associates Cardio-Card Cycle Interface

You can setup the Cycle with your stress system using the following directions. You will need the RS-232 cable specified below. It establishes communication between the monitor and your stress system. This cable allows your stress system to prompt the monitor when it needs a BP measurement. In addition, it allows the BP measurements taken by the Cycle to be transferred to your stress system display and reports.

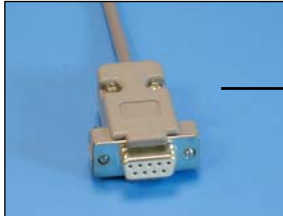

RS-232 cable
Part# 91-0013-00



1. Plugging in the RS-232 cable:

Connect: the RS-232 cable, SunTech part #91-0013-00 (9 pin female to 9 pin female)
From: the RS-232 connection on the connector panel of the Cycle (9 pin male)
To: a COM port on the back of the stress system (9 pin male)

2. Setting up the Cycle monitor

- From the measurement view, press and hold the **SELECT** and **ADVANCE** buttons simultaneously for 3 seconds. The System Menu will be displayed.
- Press the **MENU** button once to proceed to the Communication Screen. Press **ADVANCE** until *Cardio-Card* is displayed.
- Press **MENU** twice to return to the measurement view.

3. Setting up the stress system:

- In the Cardio-Card software, go to Systems Setup > Stress Setup.
- Under BP, uncheck manual and check the following options: **Auto**, **SunTech**, and **Auto read SunTech**.
- Choose the communications port to which you connected the RS-232 cable in step 2.