


Quinton Q 4500 Cycle Interface

You can setup the Cycle with your stress system using the following directions. You will need the RS-232 cable specified below. It establishes communication between the monitor and your stress system. This cable allows your stress system to prompt the monitor when it needs a BP measurement. In addition, it allows the BP measurements taken by the Cycle to be transferred to your stress system display and reports.

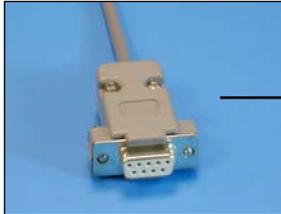

RS-232 cable
Part# 91-0019-00



Cycle
Connector Panel

1. Connecting the RS-232 cable:

Connect: the RS-232 cable, SunTech part #91-0019-00 (9 pin female to 9 pin female).
From: the RS-232 connection on the connector panel of the Cycle (9 pin male).
To: the AUX 1 connection on the back of the stress system (9 pin male).

2. Setting up the Cycle monitor

- From the measurement view, press and hold the **SELECT** and **ADVANCE** buttons simultaneously for 3 seconds. The System Menu will be displayed.
- Press the **MENU** button once to proceed to the Communication Screen. Press **ADVANCE** until **Q4500** is displayed.
- Press **MENU** twice to return to the measurement view.

3. Setting up the stress system:

- On the Main screen, select **EXERCISE TEST**.
- Select the * next to **ENVIRONMENT** by pressing * key.
- Select **PROCEDURE**.
- Select **MODIFY PROCEDURE**.
- Select **PROMPTS**.
- Fill in screen with appropriate prompts for the Cycle. Return to Main Menu. (System Config)
- Select **SYSTEM SETUP**.
- Select **SERIAL**. You will be in Serial Port Set Up. Choose **AUX1** and select **BP 412**.

- Note: AUX2 and AUX3 do not have BP 412 options.